

# Tutorial

## Update of a pictor<sup>®</sup> via TFTP


An instruction for updating the device series pictor<sup>®</sup> N and pictor<sup>®</sup> T via TFTP




### Instruction

To update via TFTP, the TFTP client must be activated in MS Windows. To do this, open the dialog *Programs and Features* in your Control Panel.

Click on *Turn Windows features on or off*.

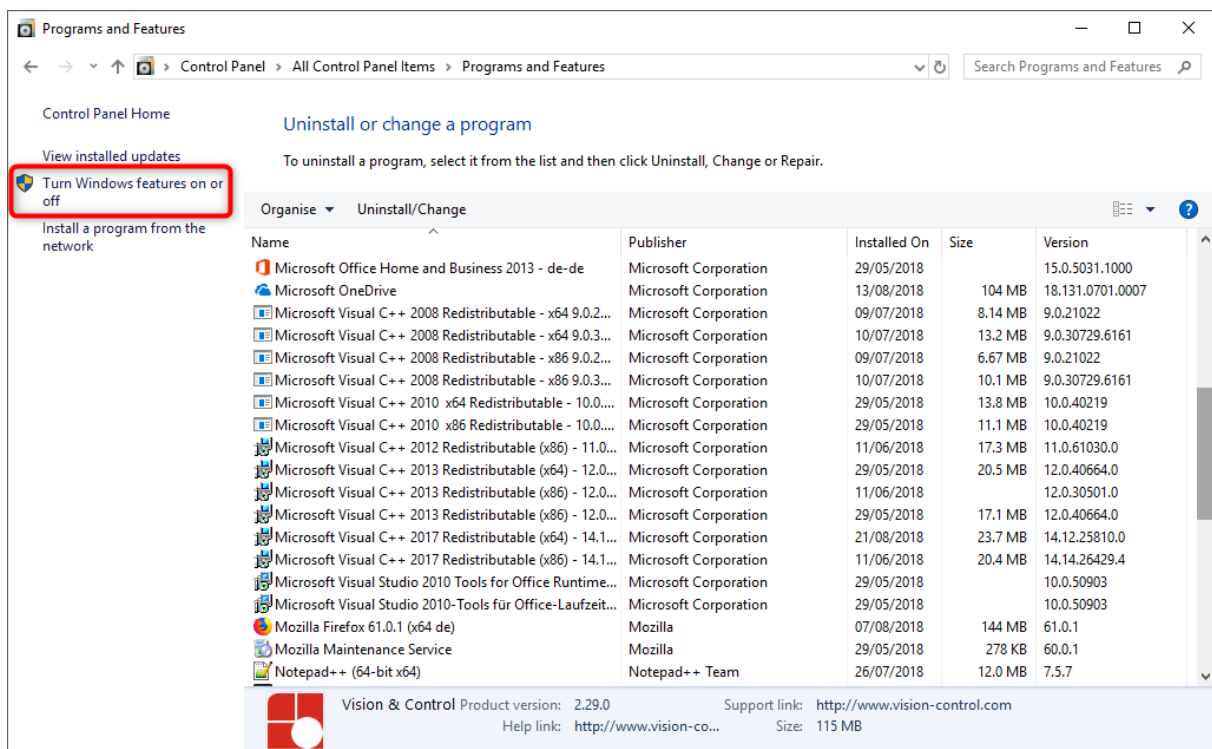

In the Windows-Features dialog set the check mark at the entry TFTP-Client and confirm your selection with OK. The TFTP client is now activated.

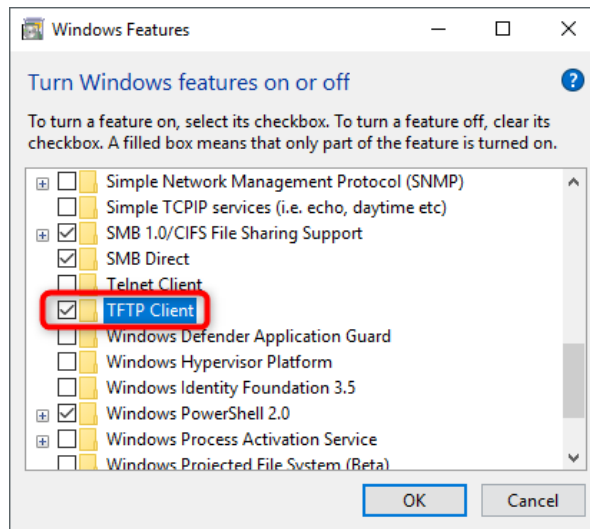

Then start a command prompt by typing "cmd" in the search prompt of the Start menu. Change to the directory in which the update file is located. Now the update file has to be transferred to the pictor® via TFTP. The TFTP command for this is structured as follows:

**TFTP -i [IP-address pictor®] PUT [filename update-file]**

Uploading the file may take some time.

```
Command Prompt
Microsoft Windows [Version 10.0.17134.285]
(c) 2018 Microsoft Corporation. All rights reserved.

C:\Users\ >cd ..

C:\Users>cd ..

C:\>cd pictor N

C:\pictor N>cd Update

C:\pictor N\Update>TFTP -i 10.15.178.72 PUT update-pictorN-v259-v269.img
Übertragung erfolgreich: 6929408 Bytes in 5 Sekunde(n), 1385881 Bytes/s

C:\pictor N\Update>
```

If there are any problems transferring the file, the reason may be the Windows firewall or another firewall. It should be deactivated temporarily.

If the transfer was successful, the pictor® must be restarted. The pictor® must not be disconnected from the power supply during the update. As soon as the device is accessible in vcwin® pro again, the update was successfully completed.

In order to use the latest features of the pictor® software, it is also necessary to use the latest version of vcwin® pro.

## Limitation of Liability

This document has been prepared with great care. Nevertheless no guarantee for completeness and correctness can be given.

An update can cause permanent damage to your product if applied incorrectly. Before downloading the firmware, verify that it is compatible with your specific device. You update the firmware at your own risk. You take sole responsibility.

In no event unless required by applicable law or agreed in writing, Vision & Control GmbH is liable for any damages of any kind relating to the update, including but not limited to any general or special damages, lost data, procurement of substitute goods, compensatory damages or lost profits. If you have any doubts, contact your local sales partner or our technical support.

Vision & Control GmbH  
Mittelbergstraße 16  
98527 Suhl  
Germany

Phone: +49 (0) 3681 7974-11  
Telefax: +49 (0) 3681 7974-33  
e-mail: [support@vision-control.com](mailto:support@vision-control.com)  
[www.vision-control.com](http://www.vision-control.com)